



THERMO MILK TABS for Black & White coffee machine cleaning

HS/TC/094/02 – February 2019

READ BEFORE STARTING



Wear PPE in each step

GLOVES

You MUST refer to the CPAs & Task Cards for your PPE Requirements




1 Clean machine according to manufacturer's instructions using following chemicals.


2 Remove and thoroughly clean the milk container and intake socket. Reinsert the container and the drawer.



3 Start automatic cleaning process: press and hold the cleaning button until the cleaning request appears. Now follow the instructions shown on display.




4 When display shows to insert milk tabs, turn the cleaning key anti-clockwise until stop, then remove it and insert 2 milk cleaning tabs.

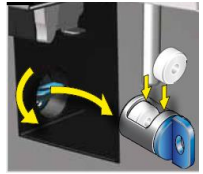


5 Reinsert the milk cleaning key and turn it clockwise until stop.



6 Place the empty grounds drawer under the spout as illustrated. Do not leave it unattended.

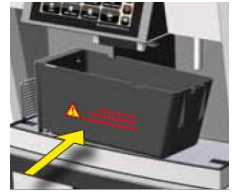

7 Press rinse button. The automatic cleaning process will start and take approximately 15 minutes.



8 After automatic cleaning is completed, empty and thoroughly clean grounds drawer, milk container and intake socket.



If in any doubt about the PPE required, please refer to the separate COSHH Product Assessment or your HSE Manager

